



# COLLIO


8680 - 8682

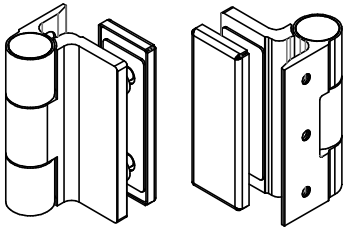

8 - 10 - 12

GLASS - VETRO - GLAS

Tools Required  
Strumenti Richiesti  
Benötigtes Werkzeug





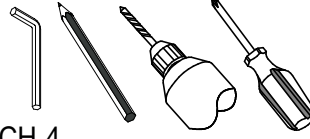


CH-4

Fittings required  
Fissaggi richiesti  
Benötigtes Befestigungsmaterial




X4

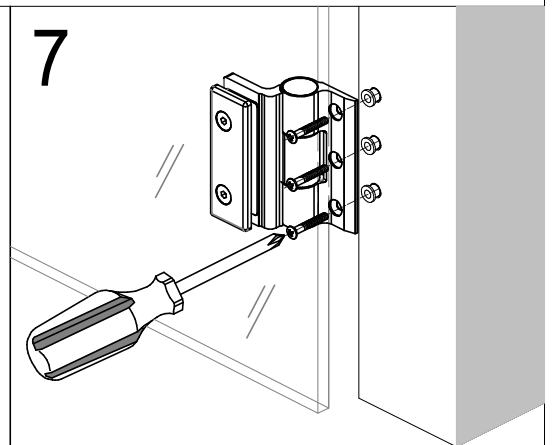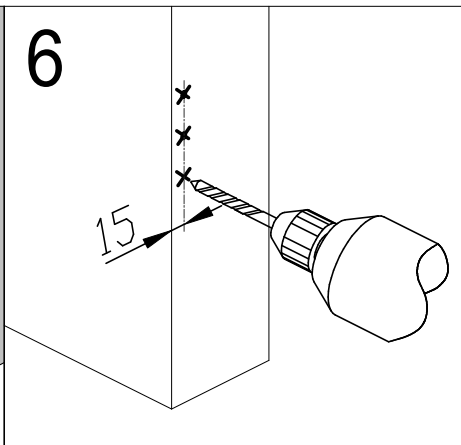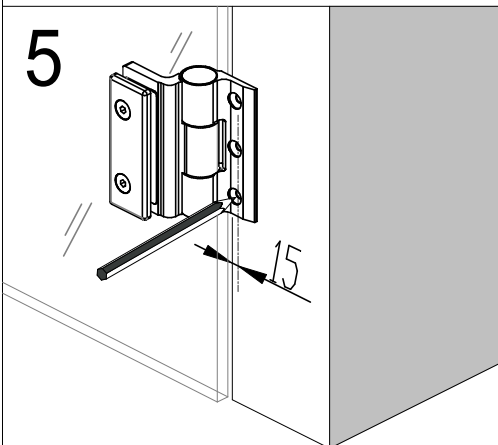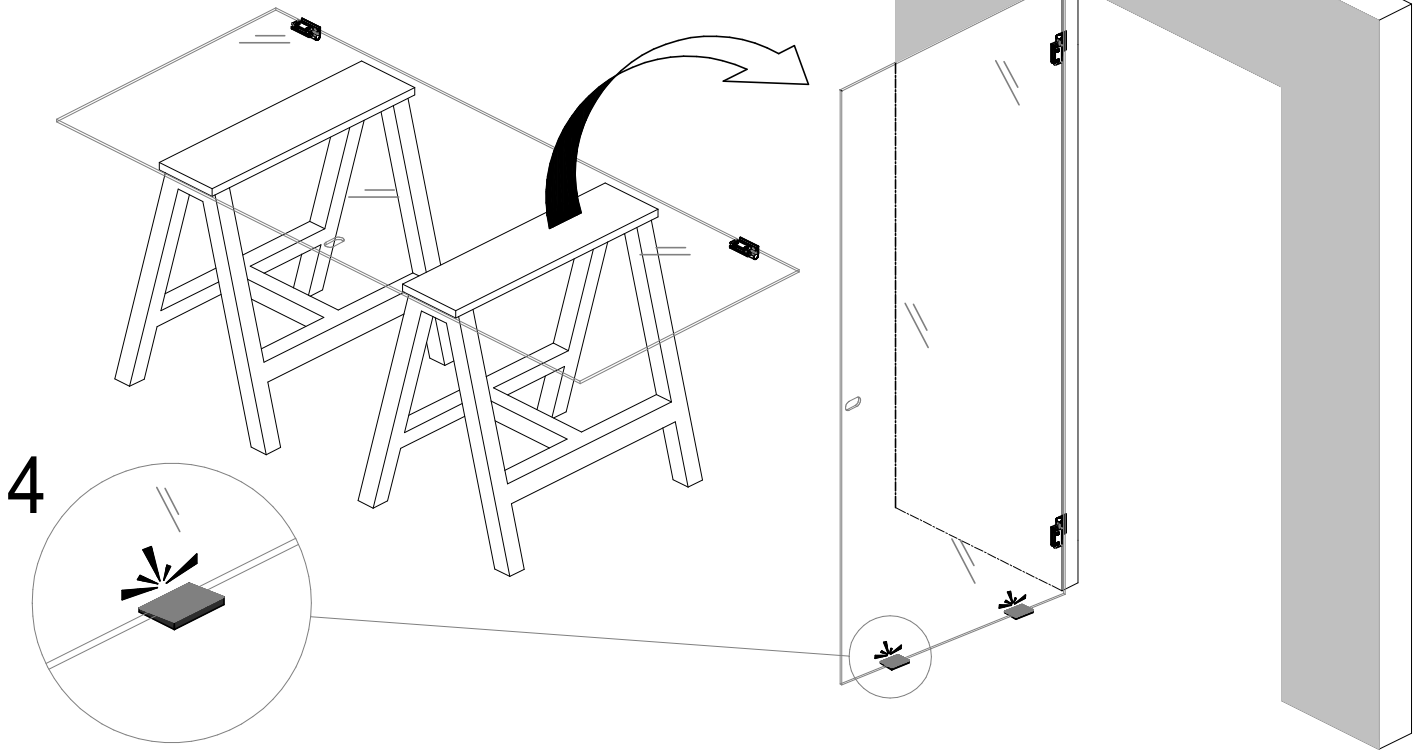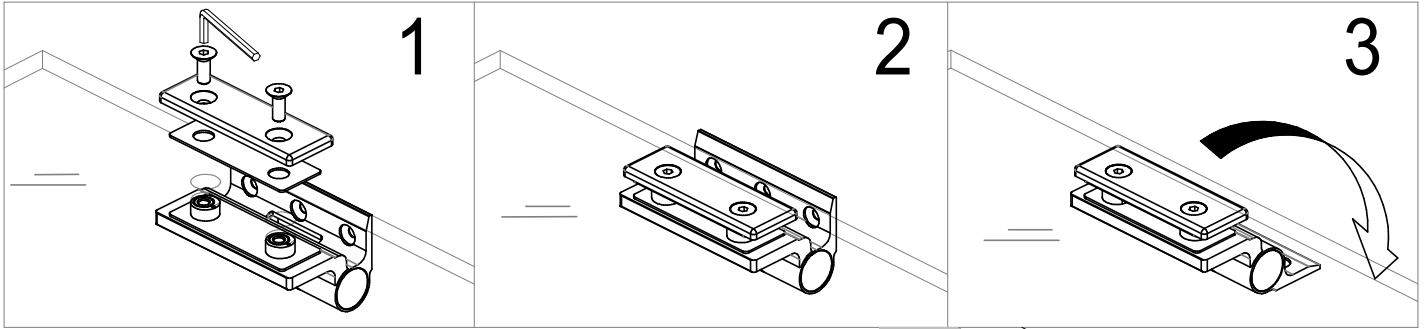


## 8

COVER  
COPERTINA  
ABDECKUNG

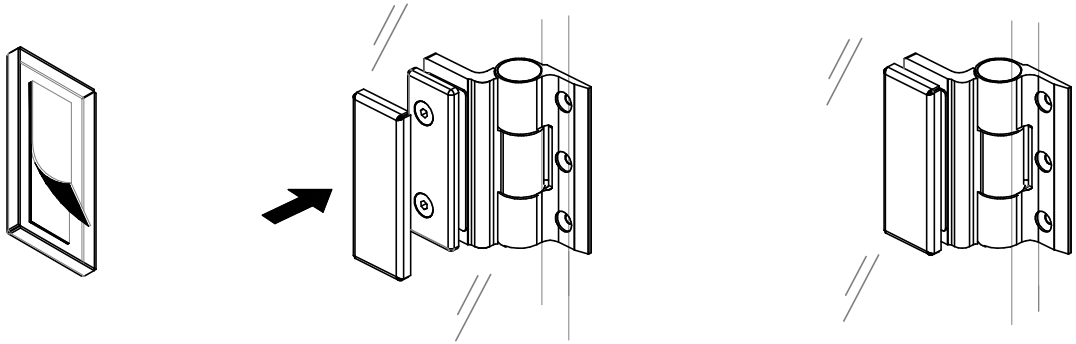

INSTALLAZIONE con PROFILO P35E - ADATTATORE K8680  
 INSTALLATION WITH P35E PROFILE - ADAPTER K8680  
 ANLAGE MIT P35 PROFIL – KIT K8680

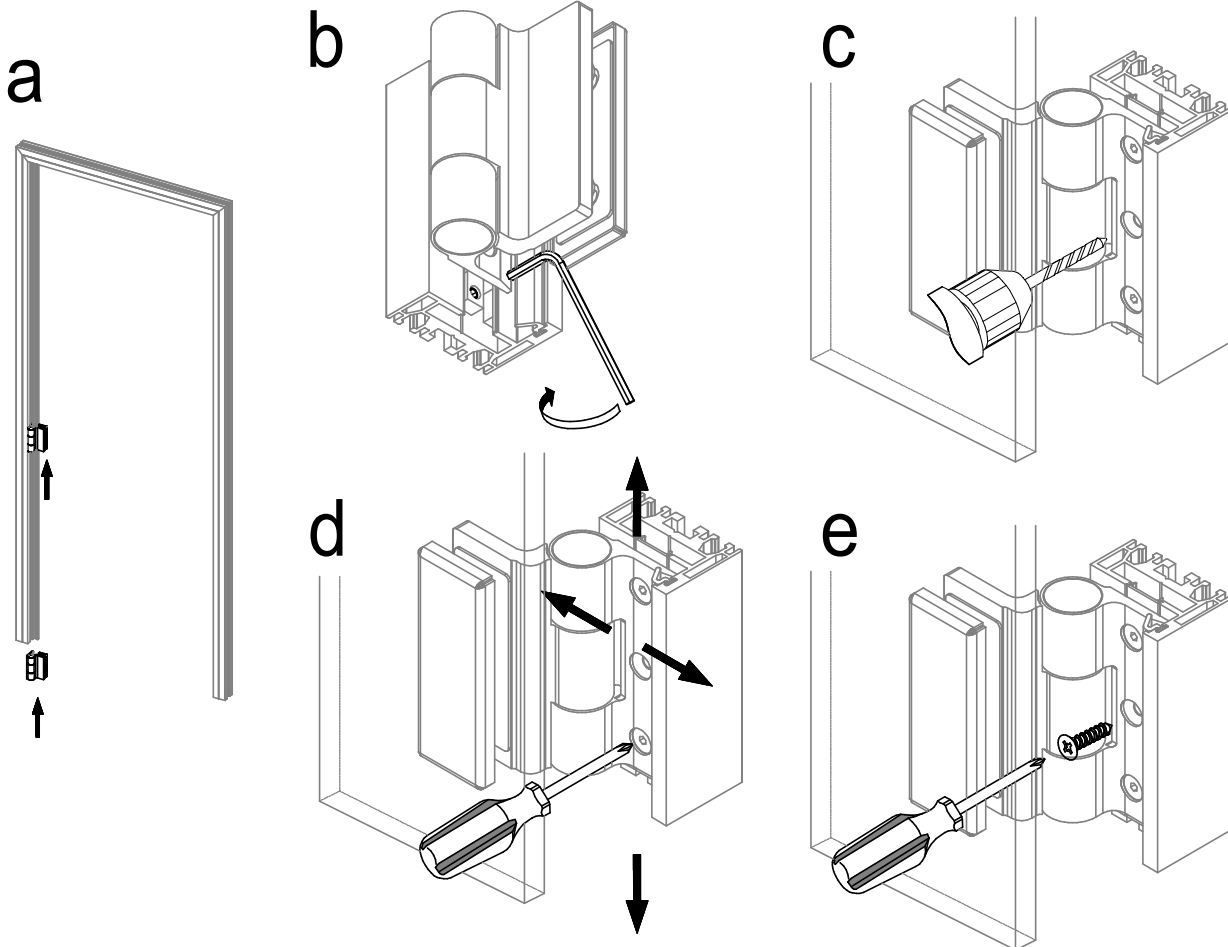

COLCOM®



ORIENTARE LA DIMA SECONDO LO SPESSORE DEL VETRO  
 POSITION THE GUIDE PLATE ACCORDING TO THE GLASS THICKNESS  
 DIE BOHRLEHRE GEMÄß GLASDICKE STELLEN

